
KOHLER®
SERVICE PARTS

ALEO S

31238T-4 3 Hole Wall Mount Bath Faucet(S)

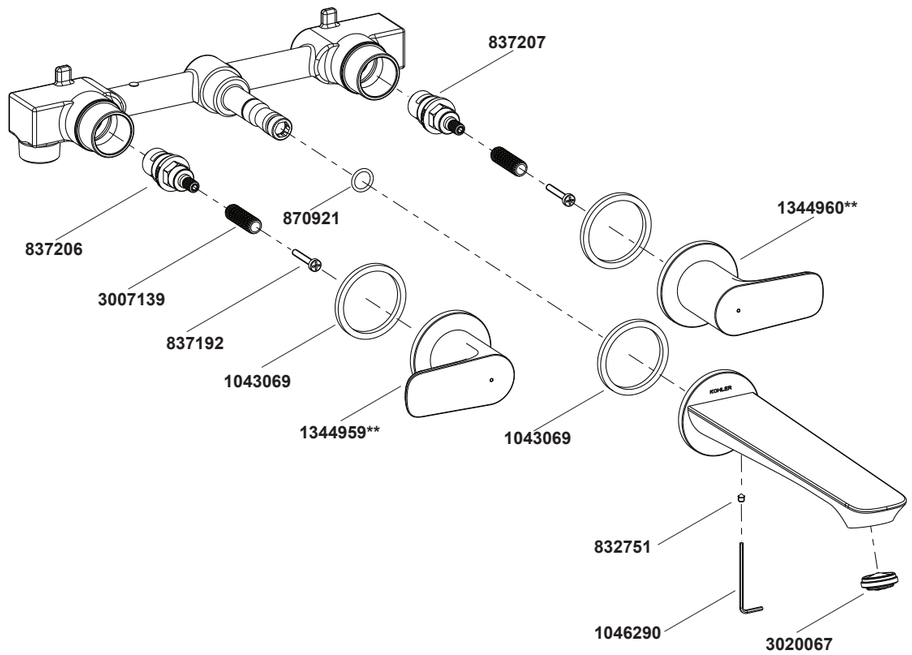

**Color code must be specified when ordering.

KOHLER®
INSTALLATION INSTRUCTIONS

ALEO S

31238T-4 3 Hole Wall Mount Bath Faucet(S)

BEFORE YOU BEGIN

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.


Please leave these instructions for the consumer. They contain important information.

NOTES:
1. Flush the water supply pipes thoroughly to remove debris.
2. Inspect the supply tubing for damage and leakage. Replace and maintain as necessary.
3. Shut off the water supplies to the fitting.
4. Observe local plumbing codes.
5. Check for leaks before cover the pipes, repairs as needed.
6. Please ensure only apply water pressure test on the product, and empty the air in pipe and faucet thoroughly before the test. Please ensure test pressure below 0.8MPa(8bar) and test duration within 30 minutes.
7. Do not remove the plaster guard body until instructed to.

HANDLE OPERATION


Right handle opens with turning clockwise. Left handle opens with turning counter-clockwise.

ROUGH-IN DIMENSIONS

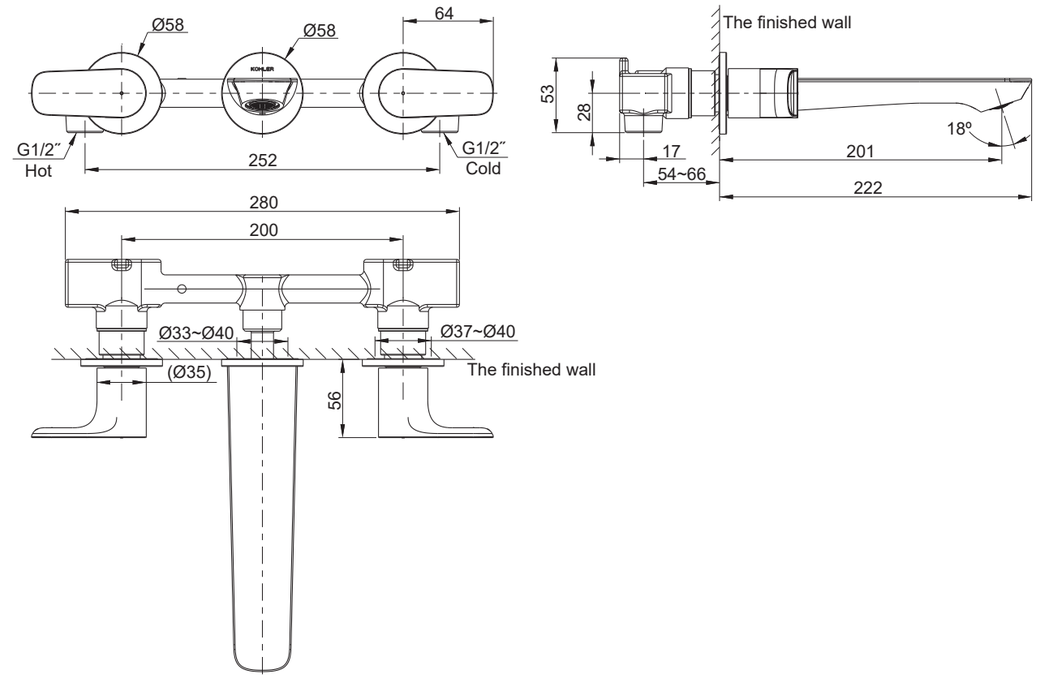

31238T-4


INSTALLATION

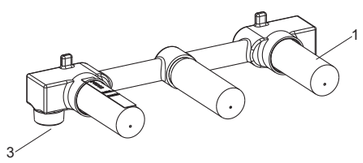

How to Install the Yoke


Do not take off guards(1) at this moment.

Connect the G1/2″ water supply pipes(2) to the supply yoke(3).

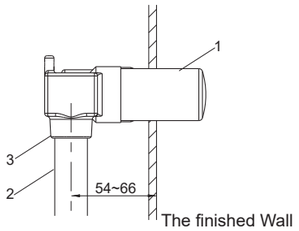

The finished wall must be between the mark Max and Min on the guards. Make sure the left supply pipe is the hot supply and connected to the end with red mark.


How to Install the Handles

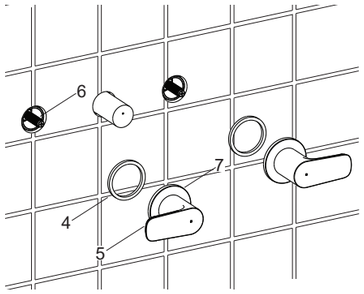


Remove and discard the valve guards after completing the finished wall.

Put the washers(4) into the groove of the handle kits(5).

Press the handle kits horizontally onto the valves(6) with the valves closed. Hold the handle and tighten the handle base(7) until it is against the wall. **NOTE:** The handle kit with red dot should be installed on the left.

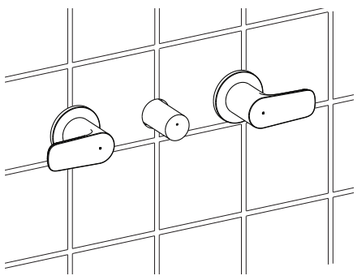

The figure shows the correct position of the handles in the off position.

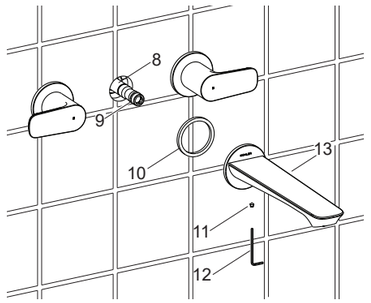

How to Install the Spout


Remove and discard the spout guard.

Insert the washer(10) into the rear of spout kit(13).

Loosen the screw(11) in the spout kit with hex wrench(12).

Install the spout kit onto the connector(8) with its outlet downwards until it is against the wall. Tighten the screw(11) with hex wrench to secure the spout. **NOTE:** Don't damage the O-ring(9) on connector.

INSTALLATION CHECKOUT

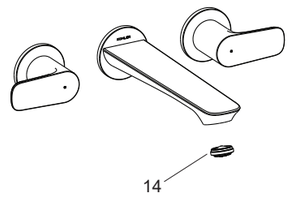

Ensure that all connections are tight. Ensure that the handles are in the off position. Turn on the drain and main water supply, and check for leaks. Repair as needed.

Remove the aerator kit(14) by coin. Turn on the faucet. Run hot and cold water through the faucet for about one minute to remove any debris. Remove any debris from the aerator kit. Shut off the faucet. Reinstall the aerator kit.

CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc, which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.